

Печи с верхней загрузкой S

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: nme@nt-rt.ru || сайт: <http://nabertherm.nt-rt.ru/>

Top Loading Furnaces

Top loading furnaces are ideal for tempering quartz glass. With smaller components, the furnaces are filled manually from the top and, with larger or heavier components, they are filled with the help of an indoor crane. With their adapted heating and the special arrangement of the heating elements, the furnaces ensure good temperature uniformity. With an extensive range of additional equipment, top loading furnaces can be adapted to suit many different process requirements.



Top loading furnace S 430

Standard Equipment

- Tmax 900 °C or 1240 °C
- Three or five-sided heating for optimum temperature uniformity
- Heating elements on carrier tubes ensure free heat radiation and a long service life
- Multi-layer refractory insulation and special rear insulation
- Bottom heating protected by SiC tiles with an even stacking base
- Fiber insulation in the lid
- Lids are opened and closed with various standardized solutions
- Over-temperature limiter with adjustable cutout temperature as temperature limiter to protect the furnace and charge
- Controller with touch operation C540 (10 programs with each 20 segments), controls description see page 86



Pit-type furnace S 11988/S with rolling lid

Additional Equipment

- Manual fresh air opening in lower area of the top loading furnace
- Manual exhaust air opening in the lid
- Automatic exhaust air flap for faster cooling
- Cooling system to speed up furnace cooling with a fan and specified temperature gradients or a fixed volume of fresh air. Both operating modes can be activated for different segments, using an extra function of the controller.
- Multiple-zone control of the heating to optimize temperature uniformity
- Fabric cover to reduce fiber dust
- Split lid to divide the furnace chamber into two halves
- Special solutions with customer-specific dimensions and equipment options are available



Top loading furnace S 750/S

Model	Tmax °C	Inner dimensions in mm			Volume in l	Outer dimensions ¹ in mm			Heating power in kW ³	Electrical connection*	Weight in kg
		w	d	h		W	D	H ²			
S 220/G	900	2450	300	300	220	3000	1000	2000	18	3-phase	1000
S 430/G	900	1200	600	600	432	1900	1300	2200	24	3-phase	1100
S 500/G	900	2450	450	450	500	3000	1100	2000	26	3-phase	1600
S 620/G	900	3050	450	450	620	3860	1100	2000	30	3-phase	2200
S 750/G	900	3000	500	500	750	3860	1500	2100	36	3-phase	2600
S 220	1240	2450	300	300	220	3000	1000	2000	24	3-phase	1250
S 430	1240	1200	600	600	432	1900	1300	2200	30	3-phase	1400
S 500	1240	2450	450	450	500	3000	1100	2000	36	3-phase	1800
S 620	1240	3050	450	450	620	3860	1100	2000	40	3-phase	2400
S 750	1240	3000	500	500	750	3860	1500	2100	57	3-phase	2800

¹External dimensions vary when furnace is equipped with additional equipment. Dimensions on request.

²Height with lid open

³Depending on furnace design connected load might be higher

*Please see page 86 for more information about supply voltage



Furnace chamber S 430



Fabric cover to reduce fiber dust



Cooling system with fresh air fan



По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: nme@nt-rt.ru || сайт: <http://nabertherm.nt-rt.ru/>