

Печи для депарафинизации N

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: nme@nt-rt.ru || сайт: <http://nabertherm.nt-rt.ru/>

Dewaxing Furnaces

electrically heated

The electrically heated N ../WAX furnaces are particularly suitable for dewaxing of ceramic molds below the flash point of the wax and subsequent firing. The electrically heated chamber furnaces have a heated outlet in the bottom of the furnace chamber, formed as a funnel with the discharge near the center of the furnace. The drain pan on the furnace bottom is covered with stainless steel grids, which provide for an even charging surface for the molds and can be removed for cleaning. The molten wax is collected in a sealed stainless steel container with a removable drawer below the furnace. After the dewaxing process is completed, the furnace continues heating to sinter the molds. Fresh air inlets in the bottom area and a motorized exhaust air flap ensure good ventilation of the furnace chamber during the process. The resulting exhaust air is discharged via the exhaust hood and further customer-provided piping.



Dewaxing furnace N 300/WAX

Standard Equipment

- Tmax 850 °C
- Chamber furnace with wide-opening swinging door
- Fresh air inlets in the bottom for continuous air exchange
- Motorized exhaust air flap in the furnace ceiling with exhaust hood for connection to customer provided ductwork
- Four side heating with freely radiating heating elements on ceramic support tubes
- Heated outlet in the furnace bottom, controlled and monitored by a separate controller with a temperature working range of min. 200 °C - max. 300 °C, to safely prevent the escaping wax from solidifying
- The furnace heating is released after a preset temperature has been reached in the drainage to protect the wax outlet from clogging
- Stainless steel floor pan with grid bottom for level loading
- Rugged self-supporting, vaulted arch construction
- Over-temperature limiter for the furnace chamber, which must be set below the flash point of the wax and prevents the wax from igniting during the melting process. The duration of the dewaxing process is specified by the customer. After this time, the over-temperature limiter is deactivated so that the furnace can continue with the sintering process.
- Controller with touch operation B500 (5 programs with each 4 segments), controls description see page 76

Model	Tmax °C	Inner dimensions in mm			Volume in l	Outer dimensions ² in mm			Max. drain-off volume in l	Heating power in kW ¹	Electrical connection*	Weight in kg
		w	d	h		W	D	H				
N 100/WAX	850	400	530	460	100	720	1130	1440	5	7.5	3-phase	325
N 300/WAX	850	550	700	780	300	870	1300	1760	15	15.5	3-phase	550
N 440/WAX	850	600	750	1000	450	1000	1400	2000	17	20.5	3-phase	800

¹Depending on furnace design connected load might be higher

²External dimensions vary when furnace is equipped with additional equipment. Dimensions on request.

*Please see page 80 for more information about supply voltage



Grid bottom



Drain pan in floor



Drawer for collection of liquid wax



По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: nme@nt-rt.ru || сайт: <http://nabertherm.nt-rt.ru/>